

# IC-705 LDG Tuner Jack



The LDG Tuner Jack is on the right side of the IC-705. A standard 1/8th" (3.5mm), stereo (TRS) cable interfaces directly to radio interface jack on most LDG desktop tuners. The three conductor stereo jack on the radio is assigned Tip-Key, Ring-Start, and Shield-Ground.



Before the LDG tuner is connected, the TUNER selection is not available on the FUNCTION screen. Notice the Tuner box is grayed out.



Turn off the radio. Plug in the tuner. Turn on radio. It's always a good idea to power off your radio "before" changing cable connections. The radio will not recognize the tuner if it is already on.



After the LDG tuner is connected, the TUNER selection is now available on the FUNCTION screen. Notice the TUNER box is no longer grayed out. Pressing the touch-screen, touch and hold TUNER for one second will start the LDG tuner. When tuning has started the TUNE icon in the upper corner will blink red. When the tuning stops, the icon will stop blinking and remains white.